


Item description/product images



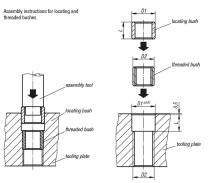

Description

Material:

Carbon steel.

Version:

Tempered to 1100-1300 N/mm².


Note:

Assembly instructions for changing threaded bushing.

Inserting the locating and threaded bushing

- 1. Remove grease from the locating and threaded bushing.
- 2. Apply adhesive (Loctite 638) in the hole.
- 3. Apply adhesive (Loctite 638) on the threaded bushing and screw in.
- 4. Apply adhesive (Loctite 638) to the locating bushing and insert it. If the locating bushing cannot be inserted by hand, please use an assembly tool as shown application example:.
- 5. Remove any adhesive pressed out by insertion of the locating and threaded bushing before it hardens.

Drawings

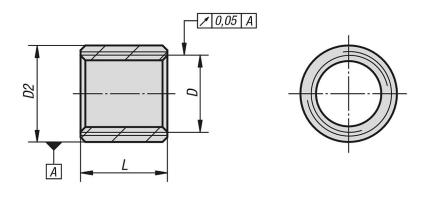

Overview of items

Order No.		D2	
03150-10-01508305003	M8	M12x1,75	12
03150-10-01012304003	M12	M16x1,5	15
03150-10-01016405003	M16	M20x1,5	18

© norelem www.norelem.com