

## Item description/product images



## Description

**Material:**

Steel.

**Note:**

Chain pin extractors enable quick and easy disassembling of roller chains so that they can be shortened or damaged parts replaced.

The pins are pressed individually through the outer link plate.

**Application:**

1. Place the jaws of the extractor over the roller of the chain link with the extractor pin centred on the chain link pin.
2. Tighten the extractor pin down by rotating the top handle clockwise until the chain pin loosens.
3. The second pin must also be loosened so that the link plate can be removed.

## Drawings



## Overview of items

Order No.	ISO No.	Division inches	Division mm
22283-05-0412	04 B - 12 B	1/3/4	6-19,05
22283-05-1620	16 B - 20 B	1-1 1/4	25,4-31,75
22283-05-2448	24 B - 48 B	1 1/2-3	38,1-76,2